

LINE UP WITH TOP
OF FENDER


SNY61C & D

*REMEMBER, THIS TEMPLATE IS
A GUIDE ONLY. MAKE SURE OF
THE POSITION OF THE HOLES
BEFORE YOU DRILL.*

INSTRUCTIONS:

1. Cut template on the dashed line
2. Fit the template on the snorkel and make sure all the holes are accurate
3. Now fit template to vehicle as indicated
4. Drill holes as indicated
5. File the hole until the snorkel fits
6. Fit snorkel to position
7. Do not overtighten bolts

8.5 mm

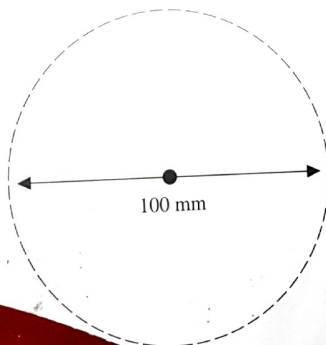

100 mm



8.5 mm



8.5 mm

LINE UP WITH RIGHT
OF FENDER